


Spare parts / Accessories

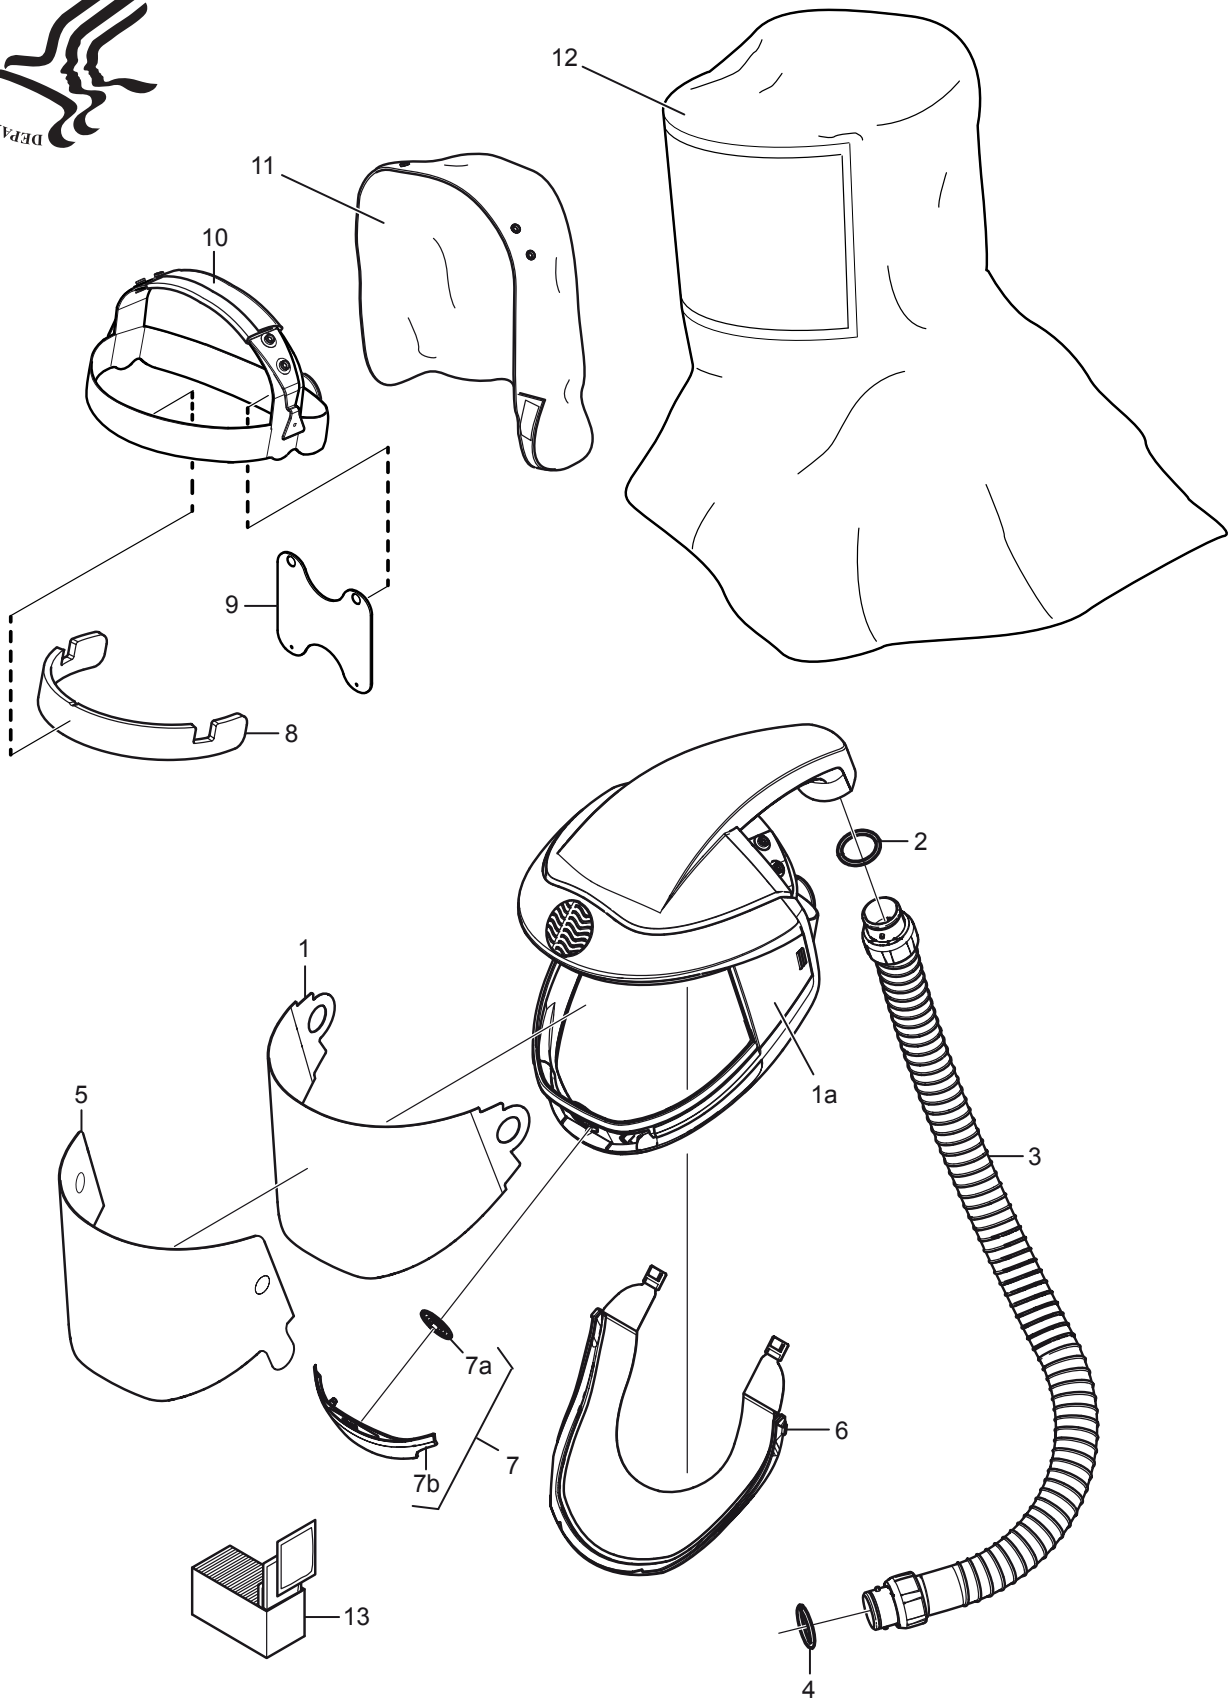

No.	Description	Ordering No.
1.	Visor PC, 10 pcs	R06-0507
1.	Visor set PC	R06-0502
1a.	Closing panel, right + left	-
1.	Visor set PETG	T06-0502
1a.	Closing panel, right + left	-
2.	Flat gasket	R06-0506
3.	Hose SR 541. 0,9 m.	R06-0501
	Hose SR 541. 1,0 m	R10-0068
4.	O-ring	R06-0202
5.	Peel of set SR 542	T06-0501
6.	Face seal SR 546	T06-0504
7.	Set of valves SR 540	R06-0505
7a.	Exhalation membrane 1 pc.	-
7b.	Cover exhalation valve 1 pc.	-
8.	Sweatband SR 544	R06-0504
9.	Neck comfort band	T06-0803
10.	Sweatband/Crown band	T06-0506
11.	Head harness	R06-0511
12.	Head cover SR 543	T06-0505
13.	Tyvek Hood SR 586	T06-0806
14.	Cleaning wipes SR 5226. 50/box	H09-0401