


# USER INSTRUCTIONS

## HALF MASK/FULL FACE MASK TEST ADAPTOR

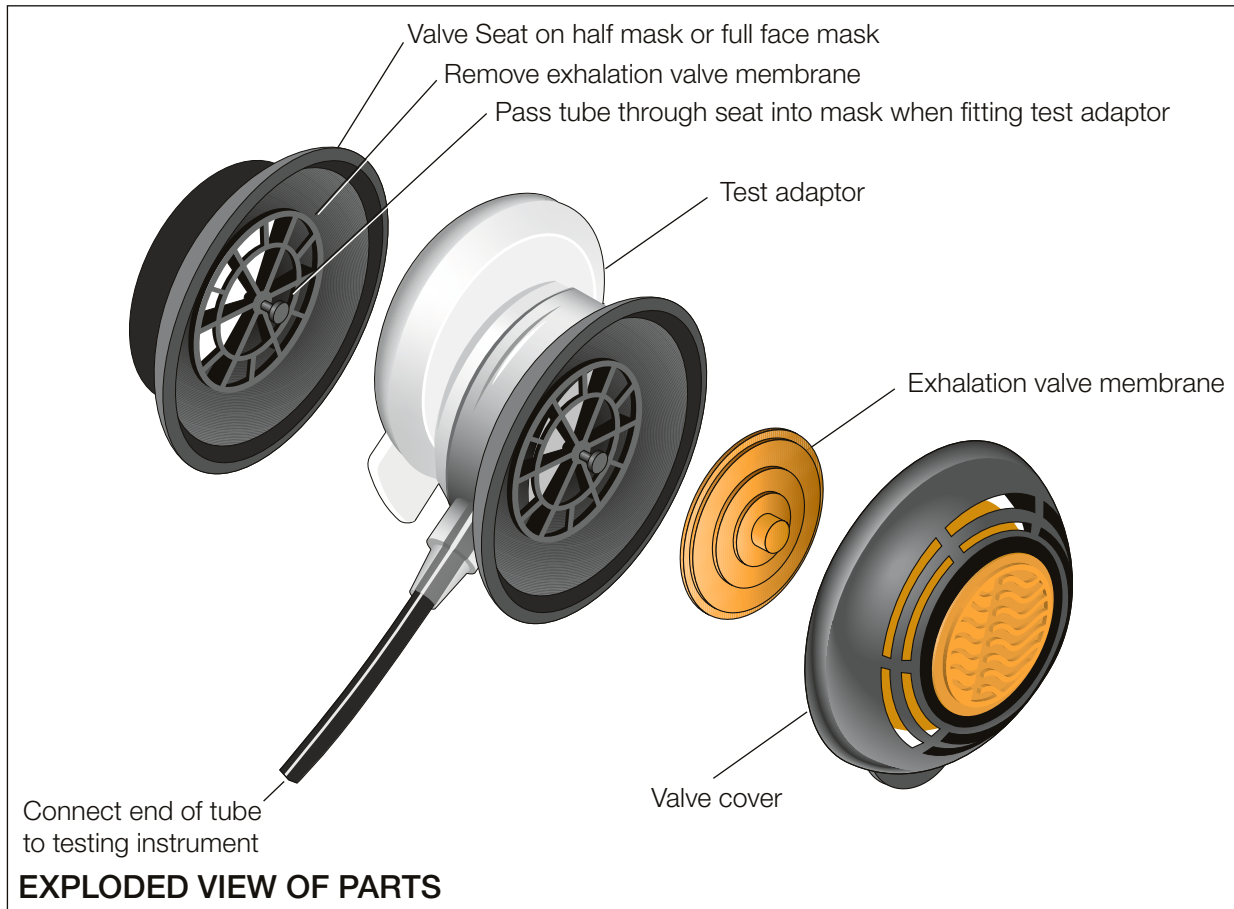

The SR 328 Test Adaptor is used to connect the half mask or full face mask to a measuring instrument for facial fit testing. The adaptor is fitted to an exhalation valve of the half mask or full face mask.

### **Procedure:**

1. Remove cover on one exhalation valve;
2. Remove the valve membrane and inspect it to ensure it is clean and in good condition;
3. Fit the adaptor to the valve seat so that the hose passes through the valve and into the mask. The outer end of the hose should point downwards;
4. Check that the internal hose does not contact the user's face when wearing the mask.

The adaptor hose can now be connected to the testing instrument.

**WARNING: This product is intended for use only for facial fit testing under test conditions. Not for use under real working conditions.**



**Sundström Safety AB**  
Västergatan 4  
SE-341 50 Lagan  
SWEDEN

Phone: +46 10 484 87 00  
E-mail: info@srsafety.se

**Manufactured by The S.E.A. Group**  
North Shore Business Park  
35/1 Jubilee Avenue  
Warriewood NSW 2102  
AUSTRALIA

Phone: +61 (02) 9910 7500  
Fax: +61 (02) 9979 5364  
TollFree: 1800-655 129  
Email: sea.australia@theseagroup.com

[www.srsafety.com](http://www.srsafety.com)